

# MultiView MultiHost Setup


Document ID: C02B1208

## Objectives:


**Procedure to set up MultiHost for users to connect to multiple DVRs at once through MultiView**

**Applicable MultiView version: v8.0 and above**

1. In GeoVision MultiView software, click on **Edit Host** button

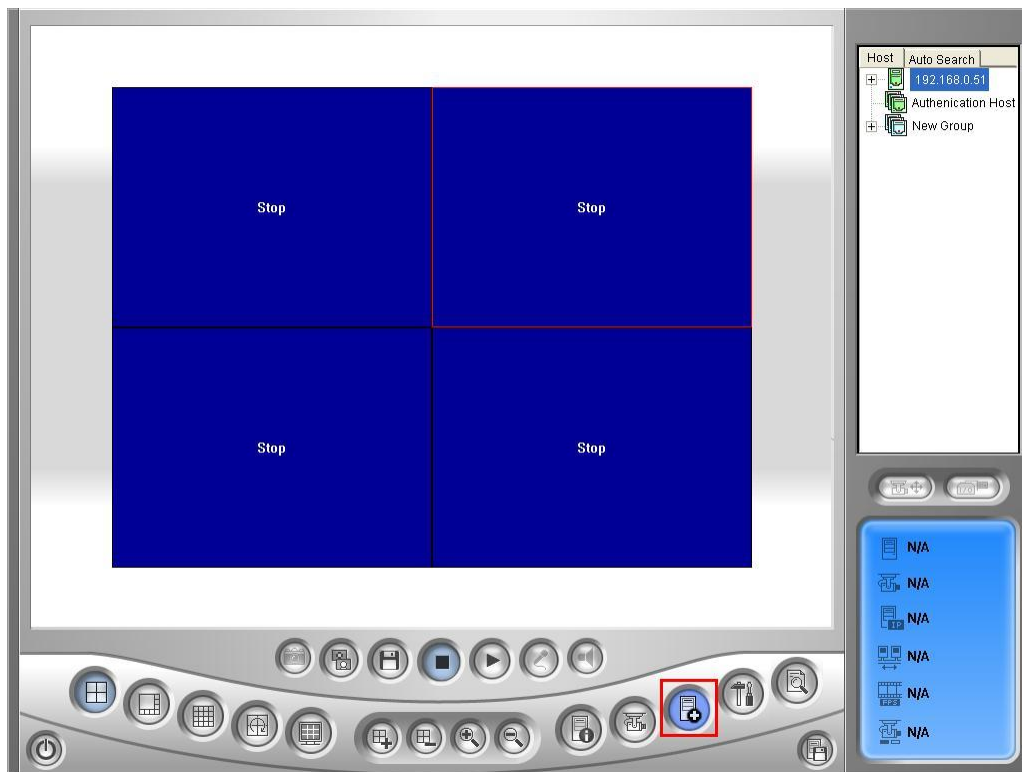

2. In Edit Host screen, click on **New** button on the under Host List then create a new group. Then click on **New** again to create a new host

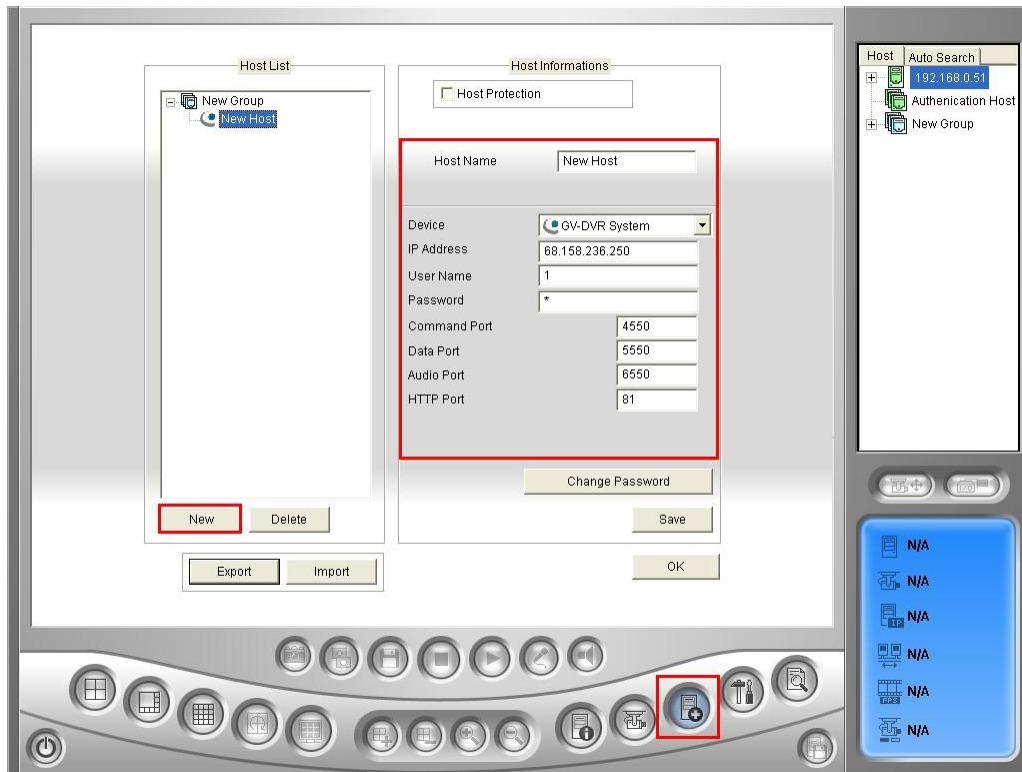

3. Under Host information, type in the **Host Name** of the DVR, then input the **IP address**, **User Name**, and **Password** associated with this DVR
  - ✓ Name a “Group” will allow you to identify DVR groups
  - ✓ Name a “Host” will allow you to identify individual DVR
  - ✓ Confirm Command, Data, Audio, and HTTP ports are correct and the same as the ports used on the DVR
4. Click **Save** to save the host settings

5. Back in the MultiView window, click on the new host that was created then drag any camera from the list to any available channel on the left for live viewing

